

GSM
Burglar
Alarm System

Table of Content

1.1General Description-----	1 -
2.2System Setup-----	3 -
2.2.1Panel Setup-----	3 -
2.2.2Connections of Cables-----	3 -
2.2.3SIM Card installation-----	3 -
3.1Alarm Panel Initial Setup-----	4 -
3.2Add Remote Control:-----	5 -
3.3Delete the remote control:-----	5 -
3.4Add detector-----	5 -
3.5Delete detector-----	5 -
4.1Commands for Configuration-----	6-
4.2Commands of System Enquiries-----	-- 11 -
4.3SMS Commands-----	13 -
5.1After receiving the Panel Alert:-----	15 -
5.2Remote Dialing In Operation:-----	15 -
6.1 Definitions of Zones-----	16 -
7 .APP Operation Manual-----	19

1.1 General Description

This LCD English large-screen GSM alarm system is equipped with technologies and suitable for both home and commercial use. It uses the advanced GSM digital signal process technology, GSM Wireless mobile networks with intelligent alarm system. It has highly integrated digital voice, SMS, self-learning wireless communication code, remote appliance control and text messaging technologies. The alarm provides automatic voice or SMS message as notifications for incidents. It is a choice of stability, reliability, security, and user friendliness. Features are very practical, cost-effective, completed configuration and ease of use. This large LCD display alarm can integrate with a lot of alarm accessories including door sensor, smoke detectors, gas detectors, emergency buttons and other accessories to build a powerful security setup. It has been widely used in homes, factories, schools, shops, convenience stores, financial and banking workplace, community centre and residential area to provide protection to valuable assets.

1.2 System Features

- Large LCD English blue back-light display, voice prompt, ease of use.
- Support GSM mobile network, provide redundancy for extra stability.
- Can check status and call records from panel.
- Allow up to 99 wireless defense zones and 4 wired zones.
- Each can be defined as one of the 8 zone types including NORMAL, STAY, INTELLIGENT, EMERGENCY, CLOSED, HELP SENIOR, WELCOME and CHIME.
- Four sets of scheduled arm/disarmed function, each time disarmed you can select the included period of time and different defense zone, eliminating of need of the manual procedure, realizing the beauty of automatic controls.
- Support configuration via phone (handset) or SMS messages to System Setup text messaging costs associated with the alarm panel.
- 6 group voice alarm phone number for alert calling, 3 group phone number for help senior, 6 group for SMS messaging, numbers saved inside EEPROM without lost upon power failure.
- Different zones can dial a pre-set telephone number.
- Telephone (phone) long-distance telephone control for arming, disarming, monitoring, remote announcement.
- 1 Set of normally open signal outputs, relay linkage output, home appliances remote control can be realized.
- Wireless intelligent study coding, compatible with PT2262 normal encoding and a 1527 encoding, convenient and flexible for adding or reducing accessories. Maximum support 150 remote control and 150 sensors.
- Unique black box features, you can display most recent 72 disarmed records and 102 recent alarm recording. Accurately shows the alarm time and control code.
- Built-in Lithium rechargeable battery and automatically switchable upon power failure, and notification will be sent via SMS.
- Panel integrated with either dual-band, triple-band, quad-band GSM/GPRS industrial graded module, stable and reliable.
- APP control function, can through the smart phone to arm, disarm, control appliances etc.


2.1 System Components and Usage

ARM

The system is at a fully ready status where all detectors are activated in a working state, when the some events (burglar, fire, gas leak, etc) happened and detected, , alarm system alarm right away.

In a ARM status, the panel [ARM] light is on, LCD screen show "ARM" is also on.

To activate using remote control: press [] key once.

To activate using keyboard: on panel keyboard [] keys once.

STAY ARM

This is for partial arming of the alarm system when there are people at home, only some of the selected sensors are activated and could be triggered by events.


To activate using keyboard: on panel keyboard [S] keys once.

DISARM

All sensors are deactivated and will not be respond to any events.

In a DISARM status, the panel [ARM] light is off, LCD screen show " DISARM " ison.

To activate using remote control: press [] key once.

To activate using keyboard: on panel keyboard [] keys once.

EMERGENCY

When an emergency occurs, press emergency button on the remote or the * /SOS button on panel to activate alarm.

Remark:

 
If password on keyboard is enabled, you need to enter password before other operations, the initial password is 1234.

2.2 System Setup

2.2.1 Panel Setup

Alarm panel should be installed at a central location with best transmission to all the wireless sensors and accessories. Keep the panel well away from large metal objects or household appliances with high-frequency interference, and avoid barriers such as concrete walls with metal frame inside and fire doors.

2.2.2 Connections of Cables

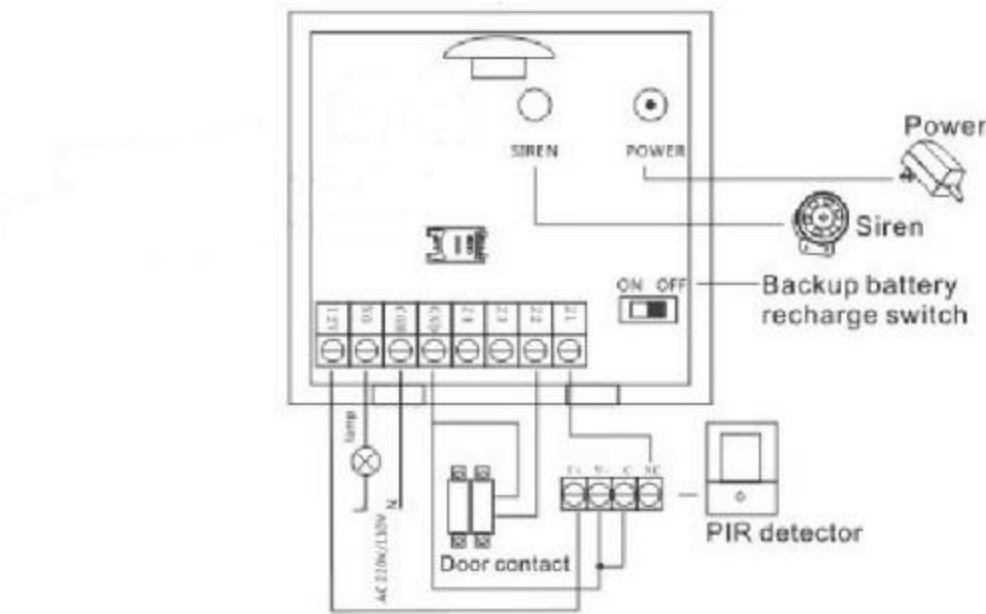

2.2.3 SIM Card installation

SIM card installation is simple. Firstly remove the cover of SIM card slot at the back of the alarm panel and then place the card according to direction indicated. Make sure the cover of SIM card slot is fixed suitably.

Function	Indications	Description
Built-in speaker	short "beep" once	Confirming key signal received
	"beep", "beep" two short tones	Exit configuration or code succeed
	"beep", "beep", "beep" three short tones	Error indication

	Voice prompt	The function and status of the prompt voice
Power LED	Light up and "AC adaptor" icon display on LCD	Panel power is normal
	Light up and "battery" icon display on LCD	Alarm panel external power disconnect, using battery
	Is off	Alarm panel without power supply
ARM LED	Light up and "STAY ARM" icon display on LCD	Alarm panel at STAY ARM state
	Long light up and "ARM" icon display on LCD	Alarm panel at ALL ARM state
	Flashing	Is changing to the DELAY ARM
	Is off	Alarm panel at DISARM
ALARM LED	Light	Alarming, LCD display specific information
	Flashing	Is changing to the DELAY ALARM
Status LED	Light	Panel at the configuration mode
	Flashing	Panel at the enquiry mode
Display on LCD the GSM Signal, SIM card Status	"GSM Signal" flashing	Searching GSM Signal
	"GSM Signal" light	GSM Good signal
	"SIM Card" not light	Indicates that no plug SIM Card
	"SIM Card" light	SIM Card loaded correctly

3.1 Alarm Panel Initial Setup

Load the SIM Card, fix the GSM Antenna, connect the power and other cables if any, then power up alarm panel. The alarm panel voice prompt "Welcome to use alarm system", and start self-test the GSM network, LCD shows "GSM signal" flashing while searching GSM Signal (it takes about 10 seconds or so for searching). "GSM signal" light means GSM signals and SIM card are normal.

Upon everything working properly, the battery switch should be at the [ON] position for continuous charging.

3.2 Add Remote Control:

Press "#" key to enter the configuration mode:

Syntax: **07+(00~99)+#** to configure remote control

Example: 07 then press 01# , to configure the 1st remote control. then press any key of the remote control to send a signal to the alarm panel, panel beep twice means successful, beep only once means the remote control has been configured before. Alarm panel can configure up to 150 remote control of different addressing. Upon completion press # to exit the configuration mode, press * and then # exit the configuration mode.

3.3 Delete the remote control:

Press "#" Key to enter the configuration mode:

Syntax 1: **08+(00~99)+#** to delete the remote control

Syntax 2: **08+**+#** to delete all remote controls

Example: 08 then press 01# for deleting 1st remote control, then if you want to delete 8th remote control, press "08" instead of "01". Press # to exit the delete remote control, press * and then # to exit configuration mode.

3.4 Add detector

Press "#" Key to enter the configuration mode:

Syntax: **09+(00~99)+#** to set the detector

Example: 09 then press 01# , to configure 1st sensor, then trigger the detector to send a signal to the alarm panel. panel beep twice means successful, beep only once means the remote control has been configured before. Alarm panel can configure up to 150 sensors of different addressing. Upon completion press # to exit the configuration mode, press * and then # exit the configuration mode.

3.5 Delete detector

Press "#" Key to enter the configuration mode:

Syntax 1: **10+(00~99)+#** to delete the detector

Syntax 1: **10+**+#** to delete all detectors

Example: 10 then 01#, to deleting 1st sensor. If you want to delete the 6th detectors, use "06" instead of "01". Upon completion press # to exit the configuration mode, press * and then # exit the configuration mode.

This system supports three methods of configuration including the local keyboard, telephone set and SMS messaging. Following are examples how instructions are given via one of the three methods of setting

Example: you want to change the first phone number for voice calling to 13899998888:

Method 1: At the Keyboard

Press # to enter the configuration mode, and then press 3113899998888# , press the * then press # to exit configuration mode.

Method 2: By telephone set

Calling into the alarm panel, upon connected, alarm panel will ask for password, it is 1234 as the default, then press #, and then press 3113899998888# , press the * then press # to exit configuration mode.

Method 3: Using SMS

On your mobile phone, compose a SMS message as 12343113899998888# and send to your alarm panel.

Remark:

The status LED is lit on the panel to indicate at the configuration mode, the status light is off upon exit.

4.1 Commands for Configuration

<p>Set up voice alarm phone number</p>	<p>To set the 1st group to the 9th group of voice alarm phone number 【 1-9 】 indicates that the first group to the Ninth group alarm number correspondingly.</p> <p>Example: If the user wants to set 13812345678 for the first set of voice alarm phone number</p> <p>Method one:</p> <p>After you press the # key to enter the configuration mode, press the 3113812345678# , press * Then press # To exit Setup.</p>
<p>Syntax: 【 3 】 + 【 1-9 】 + 【 Phone number 】 + 【 # 】</p>	<p>Method two:</p> <p>Remote calling into the alarm panel put in password (initial password: 1234) when being asked, then press the # key, hear the voice prompt means the host into setting state.</p> <p>In remote setting, press a digital then the host will broadcast one digital speech, if press a digital not broadcast speech or press once broadcast second speech mean setting not correct. Press* key to exit.</p> <p>Method three:</p> <p>Send SMS messages 12343113812345678# to a alarm panel (which at the beginning of 1234 is the user password), the alarm panel will reply with SMS message "Group 1 phone number :13812345678" to confirm the 1st group alarm phone number is set to13812345678 successfully.</p> <p>For users using the telephone line extension, you should dial a number (such as "9") to pick up a dialing tone, then with your command you should add to this number a " * ". So the completed command becomes 9*13812345678#</p> <p>Remark:</p> <p>7,8,9 group number for HELP SENIOR zone and panel will only dial these three groups number when that specific zone alarming.</p>

<p>Delete voice alarm phone number</p>	<p>Used to delete the first groups to the Ninth group alert phone numbers</p> <p>Example: If you want to delete the first set of alarm phone number,</p>
<p>Syntax: 【 3 】 + 【 1-9 】 + 【 # 】</p>	<p>Method one:</p> <p>After you press the # key to enter the configuration mode, press the 31# , then press * then press # to exit Setup.</p> <p>Method two:</p> <p>After entering the phone remote setting status, press 31#.</p> <p>Method three:</p> <p>Send SMS message 123431# On the alarm panel, alarm panel reply " Group 1 phone number: " to confirm the 1st group alarm phone number has been removed.</p>

Set phone number to receive SMS message Syntax: 【 4 】 + 【 1-6 】 + 【 Phone number 】 + 【 # 】	To set the first group to the sixth group of phone number for SMS message. When alarm panel is alert, it sends a SMS message to the six sets of numbers one by one. Example: If the user wants to set 13812345678 SMS for the first group of SMS message Method one: After press the # key to enter the configuration mode, press the 4113812345678# , then press * then press # Exit Setup Method two: After calling and connected to the panel from remote, press 4113812345678# Method three: Send SMS message 12344113812345678# to the panel.
Delete SMS phone number Syntax: 【 4 】 + 【 1-6 】 + 【 # 】	Used to delete the first group to SMS of the Ninth group police number Example: If you want to delete the first set of SMS message phone number, Method one: After you press the # key to enter the configuration mode, press the 41# , then press * then press # Exit Setup Method two: After calling and connected to the panel from remote, press 41# Method three: Send SMS message123441#
Password modification Syntax: 【 50 】 + 【 4 digits new password 】 + 【 # 】	Used to modify the user password, the default user password is 1234 Example: If you want to set up a new user password 4321 Method one: Press # key to enter the configuration mode, press the 504321# , press the * then press # to exit setup. Method two: After calling and connected to the panel from remote, press 504321# Method three: Send SMS message 1234504321#
Set delay for system arm Syntax: 【 51 】 + 【 00-99 Second 】 + 【 # 】	Upon armed from the remote control or alarm panel, the alarm panel is set to delay 0 — 99 before at the ready status of ARM. The system default is 00 seconds. Example: users need to set the delay time for 60 Seconds. Method one: Press # key to enter the configuration mode, press the 5160# , then press * then press # to exit setup. Method two: After calling and connected to the panel from remote, press 5160# Method three: Send SMS messages12345160#
Set the time of delay for alarming Syntax: 【 52 】 + 【 00-99 Second】 + 【 # 】	Set the time of delay upon alram, it can be set to 0-99 seconds, the system default is 00 seconds. Example: the user needs to set the alarm delay time to 60 Seconds. Method one: Press # Key to enter the configuration mode, press the 5260# , and press *

	<p>then press # to exit setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 5260#.</p> <p>Method three:</p> <p>Send SMS message 12345260#</p>
<p>Set length of Siren sound</p> <p>Syntax:</p> <p>【 53 】 + 【 00-20 Minute 】 + 【 # 】</p>	<p>Set alarm length of sounding when panel alarm, could be set to 0-20 minutes, factory default is 1 minute.</p> <p>Example: you want to make a siren sound 5 Minutes.</p> <p>Method one:</p> <p># Key to enter the configuration mode, press the 5305#,</p> <p>* Then press # To exit Setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 5305#.</p> <p>Method three:</p> <p>Send SMS messages12345305#</p>
<p>Set audible confirmation for remote control operation</p> <p>Syntax:</p> <p>【 55 】 + 【 Remote control number 01~99 】 + 【 0/1 】 + 【 # 】</p>	<p>1 means on and 0 means closed, the default is on.</p> <p>Example: set panel without sound when remote control number 01 is sending signal.</p> <p>Method one:</p> <p>Pressing # to entering the setup, and then press55010#, press * then press # to exit setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 55010#.</p> <p>Method three:</p> <p>Send SMS messages123455010#</p>
<p>Set date and time settings</p> <p>Syntax:</p> <p>【 56 】 + 【 4-digits year 】 + 【 01-12 The Month 】 + 【 01-31 Day 】 + 【 00-23 Hour 】 + 【 00-59 Minute 】 + 【 00-59 Second ” + 【 # 】</p>	<p>Set the system date and time</p> <p>Example: it is now 1st of July of 2011 9 : 00 : 00 am</p> <p>Method one:</p> <p>Press # to enter the configuration mode, press the 5620110701090000# , press * then press # to exit Setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 5620110701090000#.</p> <p>Method three:</p> <p>Send SMS message 12345620110701090000#</p>
<p>Scheduled arm and disarm time setting</p> <p>Syntax:</p> <p>【 57 】 + Group number 【 01~04 】 + 【 AAAA Scheduled time of arm 】 + 【 BBBB Scheduled disarmed time 】 +</p>	<p>To set the time for scheduled arm and disarm, it allows set at most four group of time for arm and disarm.</p> <p>Example: set up the first group scheduled time to arm at 22 : 00 pm and disarm at 07 : 00 am, this is valid for Monday, Tuesday, Wednesday, Thursday and Friday of each week.</p> <p>Method one:</p> <p>Press # enter the configuration mode, and then press 57012200070012345#</p> <p>Example: set up the second group scheduled time to arm at 12 : 00 and disarm at 13 : 00 pm, this is valid for all 7 days of each week.</p> <p>Method one:</p> <p>Press # enter the configuration mode, and then press</p>

<p>【 Number week 】 + 【 # 】</p>	<p>5702120013001234567#, * then press # to exit Setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 57012200070012345, then press 5702120013001234567#</p> <p>Method three:</p> <p>Send SMS message 123457012200070012345# and 12345702120013001234567#</p>
<p>SMS Send ON/OFF When Accessory's Battery Low</p>	<p>[0/1]: 0 means OFF, 1 means On\N. Default is OFF E.g. : Set SMS notification ON when battery of detectors is in low voltage.</p> <p>1. Press [#] on the keypad and then press [591#] 2. Remote calling the SIM card number, input [password]+[#] to enter setting status, then press [591#]. 3. Send SMS message [1234591#] ""</p>
<p>Command: [59]+[0/1]+[#]</p>	
<p>Set the type of defense zone</p>	<p>To set 99 zone type, 00-99 represents 0-99 zone number, 1-8 represents one of the 8 zone type:</p> <ol style="list-style-type: none"> 1. NORMAL 2. STAY ARM 3. INTELLIGENT 4. EMERGENCY 5. CLOSED 6. CHIME 7. WELCOME 8. HELP SENIOR <p>The last 0/1 represents 0 siren of panel produce no sound upon alarming while 1 is sounded.</p> <p>Example: Set zone number 2 as STAY zone type, and siren not sound upon alarming2.</p> <p>Method one:</p> <p>Press # enter the configuration mode, press 600220#, press * then press # To exit Setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 600220#</p> <p>Method three:</p> <p>Send SMS message 1234600220#</p>
<p>Syntax: 【 60 】 + 【 00-99 zone number 】 + 【 1-8 Type 】 + 【 0/1 】 + 【 # 】</p>	
<p>Set mode of wired alarm zone</p>	<p>Set wired alarm zone to NO or NC. The zone number of 51-54 are wired defense zones, system default is 51-54 are wired zones with NO mode.</p>


<p>Syntax:</p> <p>【 61 】 + 【 zone number 51-54 】 + 【 0/1 】 + 【 # 】</p>	<p>0 means NO and 1 means NC</p> <p>NO means short-circuit to alarm</p> <p>NC means open-circuit to alarm</p> <p>Example: Set 51 zone to NC,</p> <p>Method one:</p> <p># Key enters the configuration mode, press 61511#</p> <p>* Then press # To exit Setup.</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 61511#</p> <p>Method three:</p> <p>Send SMS message 123461511#</p> <p>Remark: On the back pane of the alarm panel</p> <p>51 = zone 1 and labelled Z1 52 = zone 2 and labelled Z2</p> <p>53 = zone 3 and labelled Z3 54 = zone 4 and labelled Z4</p>
<p>Door Sensor</p> <p>Two-way ON/OFF</p>	<p>[0/1]: 0 means OFF, 1 means ON. Default is OFF.</p>
<p>Command:</p> <p>[63]+[0/1]+[#]</p>	<p>E.g. : Set door sensor two-way Alarm function ON</p> <ol style="list-style-type: none"> 1. Press [#] on the keypad and then press [631#] 2. Remote calling the alarm panel, input [password]+[#] to enter setting status, then press [631#] 3. Send SMS message [1234631#]
<p>Alarm Panel AC</p> <p>Power Disconnect</p> <p>SMS Send ON/OFF</p>	<p>[0/1]: 0 means OFF, 1 means ON. Default is ON</p>
<p>Command:</p> <p>[64]+[0/1]+[#]</p>	<p>E.g. : User need SMS send when AC power disconnect..</p> <ol style="list-style-type: none"> 1. Press [#] on the keypad and then press [641#] 2. Remote calling the alarm panel, input [password]+[#] to enter setting status, then press [641#]. 3. Send SMS message [1234641#]
<p>SMS Sent ON/OFF</p> <p>When Arm/Disarm</p>	<p>[0/1]: 0 means OFF, 1 means ON</p>
<p>Command:</p> <p>[68]+[0/1]+[#]</p>	<p>E.g. : SMS Sent When Arm/Disarm</p> <ol style="list-style-type: none"> 1. Press [#] on the keypad and then press [681#] 2. Remote calling the SIM card number, input [password]+[#] to enter setting status, then press "681#". 3. Send SMS message "1234681#"
<p>Set audible</p> <p>confirmation from</p> <p>panel to on or off</p>	<p>Alarm panel will produce audible confirmation beep upon receipt of signal from remote control. 1 is on, 0 is off, default is on.</p> <p>Example: users need to disable the audible confirmation.</p>
<p>Syntax:</p> <p>【 11 】 + 【 0/1 】 + 【 # 】</p>	<p>Method one:</p> <p># then press 110# , press the * then press # Exit Setup</p> <p>Method two:</p> <p>After calling and connected to the panel from remote, press 110#</p> <p>Method three:</p> <p>Send SMS messages1234110#</p>
<p>Siren volume</p> <p>adjustment</p>	<p>Valid value is from 00 to 99 as largest, system default is the largest.</p> <p>Example: users need to set volume to 50 .</p>

Syntax: 【 14 】 + 【 00-99 】 + 【 # 】	Method one: # , and then press 1450# , press the * then press # Exit Setup Method two: After calling and connected to the panel from remote, press 1450# Method three: Send SMS message 12341450#
---	---

Keyboard password protection feature	To enable the password protect of keyboard. System default password is 1234, default is set to off. Alarm panels will display "Key lock" when keyboard is locked
Syntax: 【 17 】 + 【 0/1 】 + 【 # 】	Example: keyboard users need to set the password protection. Method one: # , and then press 171# , press the * then press # Exit Setup Method two: After calling and connected to the panel from remote, press 171# Method three: Send SMS message 1234171#
Restore factory setting	This command user for restore to factory settings (delete all preset settings such as telephone No., delete alarm/arm delay, turn off telephone line self-checking function, etc. Password turn to default 1234). But it will not delete remote control and detectors. 1. Press [#] on the keypad and then press [9898#] 2. Remote calling the alarm panel, input [password]+[#] to enter setting status, then press [9898#] 3. Send SMS message [12349898#]
Total System Reset	Disconnect power to the alarm panel, turned off the battery switch alarm panel, then press and hold the alarm panel of ARM button while power-on. The system will respond with short “beep” slowly for 5 seconds, then can release ARM button. The system is now totally reset. All configuration has been cleared, all sensors and remote controlled are deleted and password is restored to original 1234.
Syntax: Press and hold the ARM button on the keyboard and power on.	

Note: Other than the SMS commands for assigning specific phone number for certain zone, alarm panel will respond to all other SMS commands by replying confirmation of setting by SMS.

4.2 Commands of System Enquiry

Press  button on panel to enter the query mode, alarm panel status LED is blinking. Then put in commands as detailed in table below, when finished, Press *, and then press #, to exit the query mode.

Note: In case keyboard password protection is enabled, please enter the password to unlock before other commands.

Query for voice alarm phone number	To query the alarm panel currently saved to the first set to the Ninth group voice alarm phone number.
Syntax: 3+ 【 1-9 】 + 【 # 】	Press alarm panel query key of your keyboard, then blinking status LED on the Panel, and then press 31#, the alarm panel LCD show 13812345678 means alarm panel's first set of alarm numbers are 13812345678
Query SMS message	To query the alarm panel currently saved to the first set to the sixth group

alarm phone number	phone number on the alarm panel for SMS messages.
Syntax: 4+ 【 1-6 】 + 【 # 】	Press alarm panel query key of your keyboard, then blinking status LED on and then press 41#, the alarm panel LCD show 13812345678 means the first set of SMS message is 13812345678
Query password	Used to query the current password of the alarm panel , Press alarm panel query key of your keyboard, then blinking status LED on and then press 50#, the alarm panel LCD show 1234. alarm panel your current password is 1234 . Press # to clear the screen, press * then press # to exit the query mode.
Syntax: 50 + 【 # 】	
Query the time for delay arm	Query delay time for arm (00-99) Seconds Press alarm panel query key of your keyboard, then blinking status LED on and then press 51#, the alarm panel LCD show 00 mean time for delay is 0 second.
Syntax: 51 + 【 # 】	
Query delay time for alarming	To query the alarm delay time (00-99) Seconds Press alarm panel query key of your keyboard, then blinking status LED on and then press press 52#, the alarm panel LCD show 00 mean time for delay is 0 second.
Syntax: 52+ 【 # 】	
Query siren sounding time for alarming	To query the siren sounding time (00-20) minutes when the alarming. Press alarm panel query key of your keyboard, then blinking status LED on and then press 53#, the alarm panel LCD show 01 mean time for delay is 1 minute.
Syntax: 53+ 【 # 】	
Query remote control audible confirmation	For query the setting of remote control 00-99 for the audible confirmation to command.
Syntax: 55+【 00-99 】 + 【 # 】	Press alarm panel query key of your keyboard, then blinking status LED on and then press 5501#, the alarm panel LCD show ON means remote control 1 is set to sound upon receipt of command.
Query the scheduled time for arm and disarm	Used to query first to fourth set of scheduled time for arm and disarm. Press alarm panel query key of your keyboard, then blinking status LED on and then press 5701# to query the first of scheduled arm and disarm, the alarm panel LCD show ” Mon, Tue, 22-00 07-00” means schedule set as Monday and Tuesday 22:00 pm arm and 07:00 am disarm.
Syntax: 57+ 【 01 — 04 】 + 【 # 】	
Query type wireless defense zone	For query the zone types of 00-99. The alarm panel LCD show the name of type of zone, detail about zone types can be referred to another section of manual, the word “ON” or “OFF” next to the zone type represents whether siren will sound upon alarming.
Syntax: 60+ 【 00 — 99 】 + 【 # 】	
Query the type of wired zones	For query the zone type of 51-54. Example: Press alarm panel query key of your keyboard, then blinking status LED on and then press 6151# to query 51 zone alarm type, show NO means short-circuit to alarm while show NC means open circuit to alarm.
Syntax: 61+ 【 51 — 54 】 + 【 # 】	
Query alarm panel arm/disarm records	The system can save up to the most recent 72 disarmed records. Press alarm panel query key of your keyboard, then blinking status LED on and then press 9901#, press 8 to scroll up and 0 to scroll down for records.
Syntax:	

9901+ 【 # 】	Other indications as: JP = arm/disarm from keyboard YC = arm/disarm from remote tP = interference alert 01 = remote control number 1
Query alarm panel alarming records	The system can save up to the most recent 102 alarming records.
Syntax: 9900+ 【 # 】	Press alarm panel query key of your keyboard, then blinking status LED on and then press 9900#, press 8 to scroll up and 0 to scroll down for records. Example: Screen shows 01-01 22-02 02 alarm, which means alarm happened on 1 st January 22:02pm at zone 2.

4.3 SMS Commands

The following instructions are only for SMS command to control panel remotely:

Remote SMS disarm	Send SMS message 12340# into alarm panel
0#	Note: 1234 is the password
Remote SMS NORMAL arm	Send SMS messages 12341# to set the alarm panel to ARM
1#	
Remote SMS STAY arm	Send SMS message 12342# to set alarm panel to STAY ARM.
2#	
Query the AC power	Send SMS messages 12346# to the alarm panel, the alarm panel replies AC power ON or AC power OFF.
6#	
Query the alarm panel general settings	Query the alarm panel status included: arm/disarm, relay status, status of integrated alarm, status of SMS messaging, status of remote operation, password, delay alarming setting, delay arm setting, length of time of siren sounding, volume of siren, keyboard locking status, audible confirmation Example: Send SMS message 123411# to the alarm panel, the alarm panel replies with a list of related setting:

11+ 【# 】	Arming → arm status Relay out off → relay off Alarm out on → integrated alarm on Send SMS on → SMS messaging on Remote set on → remote operation on Password:1234 → the password is 1234 Alarm delay:00s → delay alarming 0 second Arm delay:00s → delay arm 0 second Siren on 1 min → siren sounding time 1 minute Siren VOL:99 → volume of siren 99 Key lock off → keyboard not lock Voice on → voice on
Query voice alarm phone number	Return a list of 1 st to 9 th phone number group for voice alarm. Example: Send 12343001# to the alarm panel, the alarm panel replies "Group 1 phone number: 13712345678" means the first voice alarm phone number is 13712345678
30+ 【01-09 】+ 【# 】	
Query phone number for SMS message	Query first to sixth group of phone number for SMS message. Example: Send 12344001# to the alarm panel, the alarm panel replies "Group 1 SMS number: 13888889999" means alarm the 1 st phone number for SMS message is 13888889999.
40+ 【01-06 】+ 【# 】	
Querying alarm panel system time	Query alarm panel system time Example: Send 123456# to the alarm panel, the alarm panel replies "System clock :2011-07-01 12:00". Means the system is now 1 st of July of 2011 12 : 00 : 00 am.
56+ 【# 】	
Check the status of scheduled arm/disarm	Query the four group of the scheduled arm and disarm Example: 12345701# to the alarm panel, the alarm panel replies:
57+ 【01-04 】+ 【# 】	Group 1 timing: Arm time:22:00 Disarm time:07:00 Arm/Disarm week:12345 Zone range:00-99 Means: the first group scheduled time to arm at 22 : 00 pm and disarm at 07 : 00 am, this is valid for Monday, Tuesday, Wednesday, Thursday and Friday of each week. control 00-99 defense zone
Check the type and siren setting of wireless defense zone	Query the type and siren setting of certain wireless defense zone Example: Send message 12346001# to the alarm panel, the alarm panel replies "01 zone is wireless zone, zone type: normal; siren ON"
60+ 【00-99 】+ 【# 】	
Check the settings of wired defense areas	Query the alarm panel for settings of zone 51 — 54 wired zone. Example: send text message 12346151# to the alarm panel, the alarm panel replies "51 zone is wired zone, zone type : normal; siren ON; alarm type: NO"
61+ 【51-54 】+ 【# 】	

80+ 【00-99】+ "Panel with SMS message"+ 【#】	Used to customize the SMS message for zone 00-99. Example: Send message "12348001 Front Door Alarm#" to the alarm panel will set alarm panel to send SMS message "Front Door Alarm" upon zone 01 alarm being triggered. Note: Maximum length of message is 25 characters.
Query the customized SMS message content	Query zone 00-99 the content of SMS message customized. Example: Send 12348101# to the alarm panel to query for zone 01 message content.
81+ 【00-99】+ 【#】	

Note: "1234" string shown above table all represents the password. User can change password and thus should adjust the commands listed accordingly.

Remark:

This machine can be used as a mobile for conversation. To do that, on the keyboard, put in #0013812345678# where 13812345678 is the phone number you're going to connect. At the end of your call, press DISARM key, press *, then press # to exit.

5.1 After receiving the Panel Alert:

After Panel alerts, it will automatically dial the preset phone number for three times until connected. When the user picks up the phone, a piece of pre-recorded voice message will be played back immediately and let the receiver noted about the event. Upon receiving the call, it can also control the alarm panel remotely via the phone (according to the command below). User will not be asked for password upon connected and alarm will automatically hang up call within receiving any instruction within 20 seconds.

- | | |
|---|--------------------------------|
| [1] key: arming | [2] key: disarming |
| [3] key: monitoring open | [4] key: monitoring closed |
| [5] key: turn on announcement | [6] key: turn off announcement |
| [7] key: siren ringing | [8] key: stop siren sound |
| [9] key: turn on relay | [0] key: turn off relay |
| [*] key: hang up, system will not dial the next number on list. | |

Remark:

If not hang up using [*] key or disarm using [2] key, the system will retry to call the next phone numbers on list until one connected.

Panel will not ask for password when dialing out upon alarming.

5.2 Remote Dialing In Operation:

Remote-control operations can be done via any phone. You can just dial into the alarm panel and user will be asked for password upon connected and alarm will automatically hang up call within receiving any instruction within 20 seconds or password is incorrect. (original password 1234)

- | | |
|-------------------------------|--------------------------------|
| [1] key: arming | [2] key: disarming |
| [3] key: monitoring open | [4] key: monitoring closed |
| [5] key: turn on announcement | [6] key: turn off announcement |
| [7] key: siren ringing | [8] key: stop siren sound |
| [9] key: turn on relay | [0] key: turn off relay |
| [*] key: hang up, | |

[#] key: Enter the system remote configuration mode, Without receiving no instruction, the panel will automatically hang up after 20 seconds.

6.1 Definitions of Zones

The alarm supports 99 distinguishable defense zones and they can be classified into one of the 8 Zone Types with their respective characteristics.

Type ID	Zone Type	Interpretation
1	NORMAL Defense Zone	the Panel only works on the arming status. When disarming, there is no response.
2	STAY Defense zone (AT-HOME Defense zone)	can be shut off solely through the remote control (keyboard) to avoid the Infrared Detectors and other in-room detectors from misinformation when master is resting at home.
3	INTELLIGENT Defense zone:	if the detector in the Defense zone is triggered only once, it will not immediately alarm. But if being triggered once again within 30 seconds after the first triggering, it will alarm immediately.
4	EMERGENCY Defense zone:	no matter on arming or disarming status, if detector is triggered it will alert. Usually used in connecting with Smoke Detectors, Gas Detectors and emergency button, etc.
5	CLOSED Defense zone:	no matter arming or disarming status, detectors will not alert even being triggered.
6	CHIME Zone	No matter in what status, when sensor with this zone is triggered, a welcome door bell will be ring as notification.
7	WELCOME Zone	Only work on the arming status, when sensor with this zone is triggered, a welcome voice message will be played.
8	HELP SENIOR Defense Zone	This type of zone is for elderly safety, no matter in what status, the panel will alarm once sensor with this zone type is triggered.

6.2 Fitting parameters:

- Input voltage: DC9V-12V
- Standby currents: < 25 mA
- Alarm current: < 450 mA
 - Wireless frequency: 315/433MHZ , 2262/1.5-4.7M , EV1527/300K
- GSM Format: Support GSM850/900/1800/1900MHz (option)
 - Backup battery: Lithium battery DC7.2V
 - Alarm loudness: 110dB

Detailed parameters: The alarm should be compatible with PT2262, PT2240 and EV1527. Using PT2262 encoding, the resistance is recommended 1.5M-4.7M; using with EV1527 encoding, the resistance by 300K.

7、APP Operation Manual



Apple user search "WifiAlarm"



Android user search "WifiAlarm"

After download APP in smart phone, user need to register in APP, click “Register” button to go to register interface. User can choose phone number or email and enter password, then click“ Register” to save settings. Then user can log-in the APP to do operation.

1.Add device

- 1). add the device,press “Device”(at the bottom of the page),
 - 2)device name you can make a name yourself, just like “home”, “office” or any others. (since you might have two alarm systems need to be controlled with one smart phone. One alarm in home and the other one in office)
- P.S.: One APP supports more than one alarm system
- 3). Device number is the phone number of the sim card which you already put inside the alarm system.
 - 4). Device password is the password of alarm system, the factory setting is 1234

2.Operate

Back to the first home page,choose the device you added just now,then you can operate it.
Pictures in next page