Manufactured in China for: DELTA-OPTI Monika Matysiak, 60-713 Poznan, 10 Graniczna St., Poland www.shopdelta.eu

RG-EST310V2 Wireless Bridge User Manual

Note

The device and software will be upgraded constantly. Please contact Ruijie technical support for details.

Parts List

Management software WSP-EST310 V2 has been installed on the device.

Part Description	Qty
RG-EST310V2 Camera End	1
RG-EST310V2 Video Recorder End	1
24V/0.5A PoE Power Adapters	2
Anchors	4
Mounting Brackets	2
Self-Tapping Screws (ST4.2Q9)	4
Pole Clamps	4
Warranty card	1
Quick Start Guide	1
Power Cable	2

Networking



Camera-Switch(Optional)-Camera End

Video Recorder End-Switch-Server

LED & Ports



- 1. LED Description
 - a. System LED

Blinking Green: The device is being booted.

Solid Green: The device is working properly.

b. LAN LED

Off: No cable is connected.

Blinking Green: Link is up. The port is sending or receiving data.

Solid Green: Link is up. The port is not sending or receiving data.

c. Signal LED

Off: No signal is detected.

Blinking: The sign al is weak.

Solid: The stronger the signal gets, the more LEDs light up.

- 2. 12V DC Power Port Inner Diameter: 2.1mm. Outer Diameter: 5.5mm.
- 3. LAN/PoE Port
- 4. Reset Button

Cable Connection

Video Recorder End



PoE Max Distance: 100m (CAT5/6/7 Cable)

Camera End



PoE Max Distance: 100m (CAT5/6/7 Cable)

Mounting the Device

Pole Mounting





1. Secure the mounting bracket to the pole by threading two clamps

through the mounting bracket.

2. Install the device to the mounting bracket.

Wall Mounting



- 1. Secure the mounting bracket on the wall.
- 2. Install the device to the mounting bracket.

Bridging Management

The wireless bridges are used in pairs without extra configuration. If you want to manage the bridge or view data, both App management and Web management are available.

App Management (Recommended)

- 1. Scan the QR code on the manual or device to download Ruijie Cloud App.
- 2. Sign up an account and log in with it.
- Navigate to Project>+in the upper right comer > Wireless Bridge to manage the device •



Web Management

Wireless Login (Recommended)

1. Connect to the 5G SSID of the bridge (Default: @Ruijie-bxxxx. xxxx indicates the last four digits of the MAC address).

2. Open a browser window, enter http://192.168.120.1 into the address bar and press Enter.

Wired Login

1. Set the IP address on your computer.

IP Address: 10.44.77.100

Subnet Mask: 255.255.255.0

Gateway: 10.44.77.254

General			
You can get IP settings assigned au this capability. Otherwise, you need for the appropriate IP settings.	tomatically if your network supports to ask your network administrator		
O Obtain an IP address automati	cally		
• Use the following IP address: -			
IP address:	10 . 44 . 77 . 100		
Subnet mask:	255.255.255.0		
Default gateway:	10 . 44 . 77 . 254		
Obtain DNS server address aut	tomatically		
• Use the following DNS server addresses:			
Preferred DNS server:			
Alternative DNS server:	• • •		
Validate settings upon exit	Ad <u>v</u> anced		
	OK Cancel		

2. Open a browser window, enter http://10.44.77.254 into the address bar and press **Enter.**

One-to-Many Settings

Select Master Bridge

Select any video recorder end as the master bridge and power on the device.

Select Slave Bridge

Select any other device (either video recorder end or camera end) as the slave bridge and take the following steps to configure the slave bridge.

Configure Slave Bridge

- 1. Log into the Web management page.
- 2. Select **Pair Again** in the upper right corner.



3. Click Start.



4. 4. Select a country or region from the dropdown list and click **Next.**

(Country/Region ×		
The country/region you select here must be the same as the country/region of the WDS network.			
Country/Region:	United States (US)		
Previous	Next		

5. Select Camera(CPE) and click Next

N	lode Switchove	er ×
Work Mode:	VCR (AP)	~
Previous		Next

6. Click **Scan** and select an SSID from the dropdown list or enter an SSID (Example: @Ruijie-wds-xxxx. xxxx indicates the last four

WDS SSID or enter	WDS SSID.
WDS SSID	Scan
	WDS SSID or enter

7. Click Submit.

	Setup	×
WDS SSID:	@Ruijie-wds-6cc1	
Previous		Submit

- 8. The **Mode** LED on the video recorder end is solid on and the **Mode** LED on the camera end blinks at 0.5 Hz
- 9. If you want to add camera ends, please take the above steps again.

Notes

- 1 .Please make sure that there are no obstacles between both ends.
- 2. If there are obstacles, please make sure that the devices are installed 3 to 5 meters higher than the obstacles.
- 3. If the obstacles cannot be avoided, it is recommended to adopt the repeater solution to implement Back-to-Back WDS.
- 4. For data transmission over a super-long distance, it is recommended to adopt the repeater solution to reduce distance between each pairing devices and improve stability.
- 5. If the monitoring devices and peer ends are concentrated at one

location, it is recommended to select one-to-many solution to reduce cost and improve efficiency.

- Please make sure that the distance between both ends are over 2 meters.
- 7. The **Mode** LED on the video recorder end is solid on and the **Mode** LED on the camera end blinks at 0.5 Hz
- 8. The device may cause radio interference in living environment. Please take measures to reduce interference.

Note:

This equipment is restricted to indoor operation in 5.15-5.25GHz for Hong Kong.